

# VVH-CBE66

## 遠端專業行車記錄器

2CH H.265 FULL HD 1080P




### 產品內容


主機、電源延長線2M、主機支架(含3M雙面膠貼紙)  
三角螺絲板手、產品光碟

### 電源安裝說明



1. 直接安裝至電池，將正級(紅線)接至電池正級，負極(黑色)接至電池負極，ACC 控制線(灰色)接至點火開關。

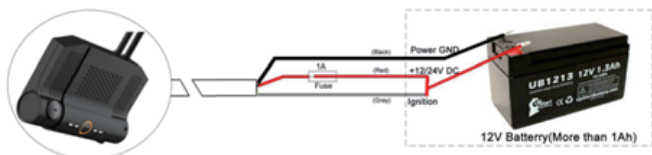


2. 直接安裝至保險絲，將正級(紅線)接至保險絲開關，負極(黑色)搭鐵接地，ACC 控制線(灰色)接至點火開關。

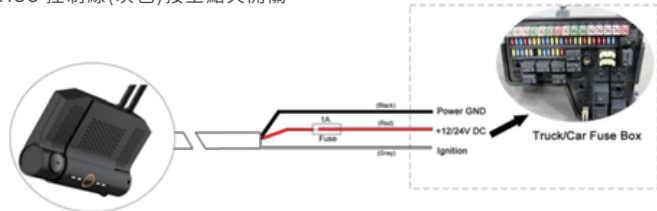


3. 透過OBD 接電，將正級(紅線)接至OBD 16號腳位，負極(黑色)接至OBD 4號腳位，ACC控制線(灰色)接至點火開關。

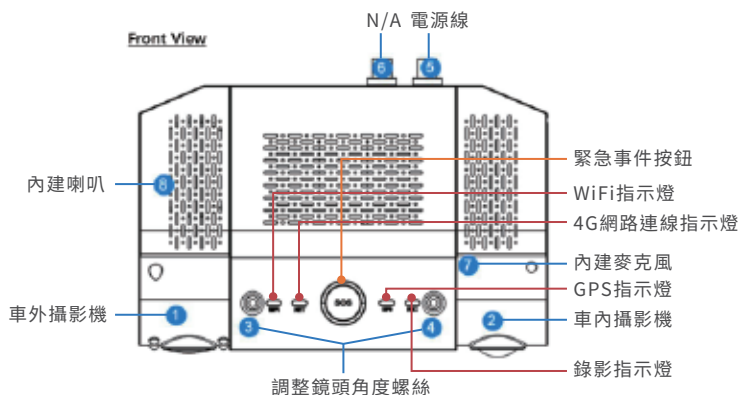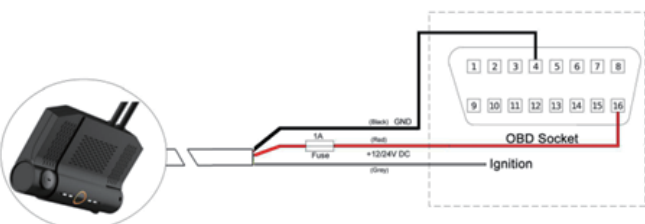


### Back View

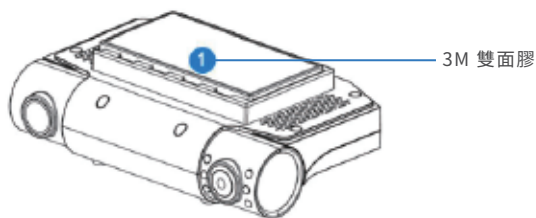

### Side View

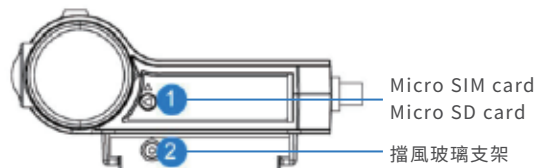

### Viewer 介面

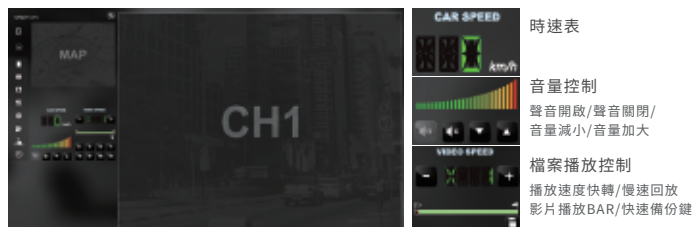

	關閉程式		擷圖工具		暫停鍵		上一張鍵
	縮閉視窗		機器相關設定		播放鍵		下一張鍵
	開啟影片		工具列、記憶卡 格式化、語言設定		停止鍵		上一檔案鍵
	事件行事曆		3軸加速感測器		倒播鍵		下一檔案鍵
	磁碟備份		路線軌跡地圖、 經緯度顯示				

### 安裝注意事項

- (a) 主機不防浸水建議放置於防潑水腰包內，安裝後確認腰包密合。
- (b) 安裝時，請確認攝影機防水接頭與電源接頭是否都有接上，以免因接觸不良導致錄影異常。
- (c) 錄影前請確認行動電源是否有充足電量，避免因電量不足導致錄影中止。
- (d) 記憶卡可能因為廠商製程改變或調整，而出現相容性問題，本設備無法保證可以相容所有市售記憶卡。若有記憶卡相容性問題建議更換型號或廠牌。
- (e) 記憶卡若未先使用專用播放軟體進行格式化，則機器會將整張記憶卡內資料強制清除後，再以機器預設值開始錄影。特定機型未格式化可能不允許錄影。
- (f) 記憶卡有讀寫次數與壽命問題，建議定期檢查與使用電腦播放影像，確保記憶卡仍可正常讀寫。
- (g) 於撞擊及與高振動時，有可能會導致記憶卡磁區物理性損毀，導致播放斷斷續續或無法撥放問題，建議定期檢查與備份重要資料。
- (h) 當發生事故時，請將記憶卡取出並設定為防寫狀態，避免資料被修改或被覆寫。
- (i) 安裝或移除攝影機前，必需先將電源關閉，以免造成電源異常或短路現象。

# VVH-CBE66

## Networkable Professional Dashcam

2CH H.265 FULL HD 1080P




### Product content

Host device\*1、2 Meter power cable、wrench  
Bracket holder with 3M adhesive、Product CD


H11A0E6600

### Electrical Installation



1. Connecting to the battery. Connect the red wire (+) to the battery (+), and the black wire (-) to the battery (-). The gray wire connects to the ACC ignition switch.

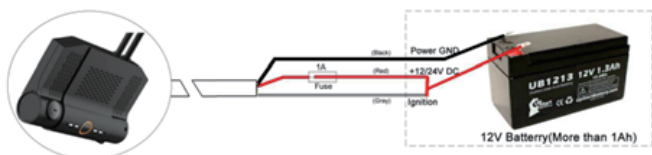


2. Connecting to the fuse box. Connect the red wire (+) to the fuse switch, and the black wire to Ground (GND). The gray wire connects to the ACC ignition switch.

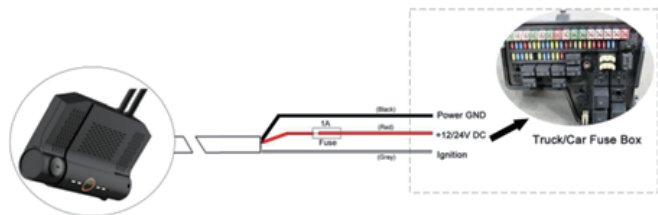


3. Connecting to OBD. Connect the red wire (+) to OBD pin 16, and the black wire (-) to OBD pin 4. The gray wire connects to the ACC ignition switch.

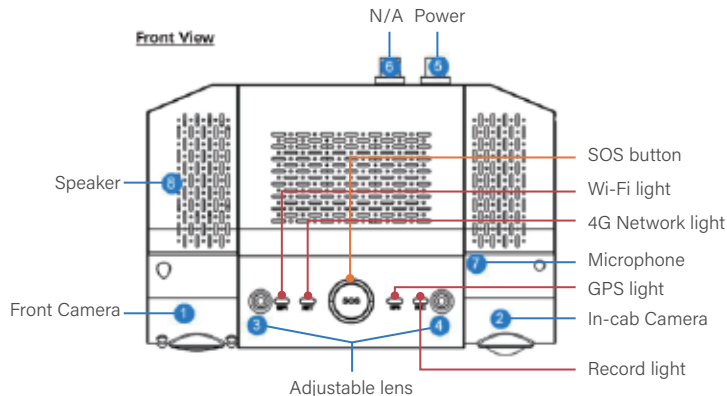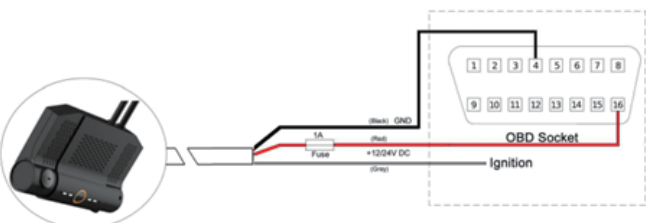

### Back View

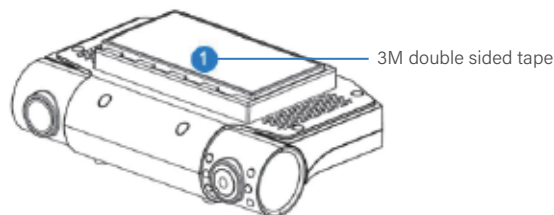

### Side View

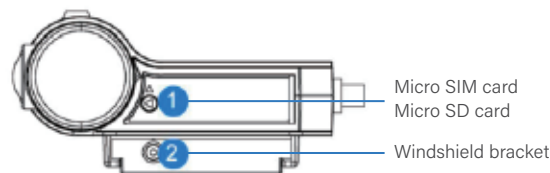

### Viewer



	Close		Snapshot	<b>Play &amp; Settings Icon Instruction</b>	
	Minimal		Configuration		Pause
	Playback		Format		Play
	Calendar		G-sensor		Stop
	Backup		Compass		play backward
					play previous frame
					Play next frame
					Play previous file
					Play next file

### Attention

- It is recommended to put the device inside the waterproof waist pack, because the host device is not waterproof. Please ensure the waist pack cover is closed after installation.
- During the installation, please check the camera waterproof connector and power connector condition, to prevent video errors caused by poor contact.
- Make sure the mobile power pack has enough power to avoid stopping recording.
- Memory cards may have compatibility issues due to manufacturing process changes or adjustments. This device does not guarantee compatibility with all current memory cards. Change memory card mode if you meet the compatibility issue.
- Before using the memory disk, please format the disk first by using the software player in the CD-ROM. If not, the device will automatically erase all data in the memory disk before recording.
- Memory cards have a limited lifespan, please regularly watch videos on a PC and check the memory disk to ensure proper functioning.
- Collision and vibration may cause SD card defects and result in intermittent recording, please check data and backup files periodically.
- When an accident happens, please remove the SD card and set it to write protection mode to avoid recording being overwritten or tampered with.
- To avoid power connection errors, turn off the device power before installing or removing the camera.